




# GDO-11v1 SecuraLift®

Overhead Garage Door Opener

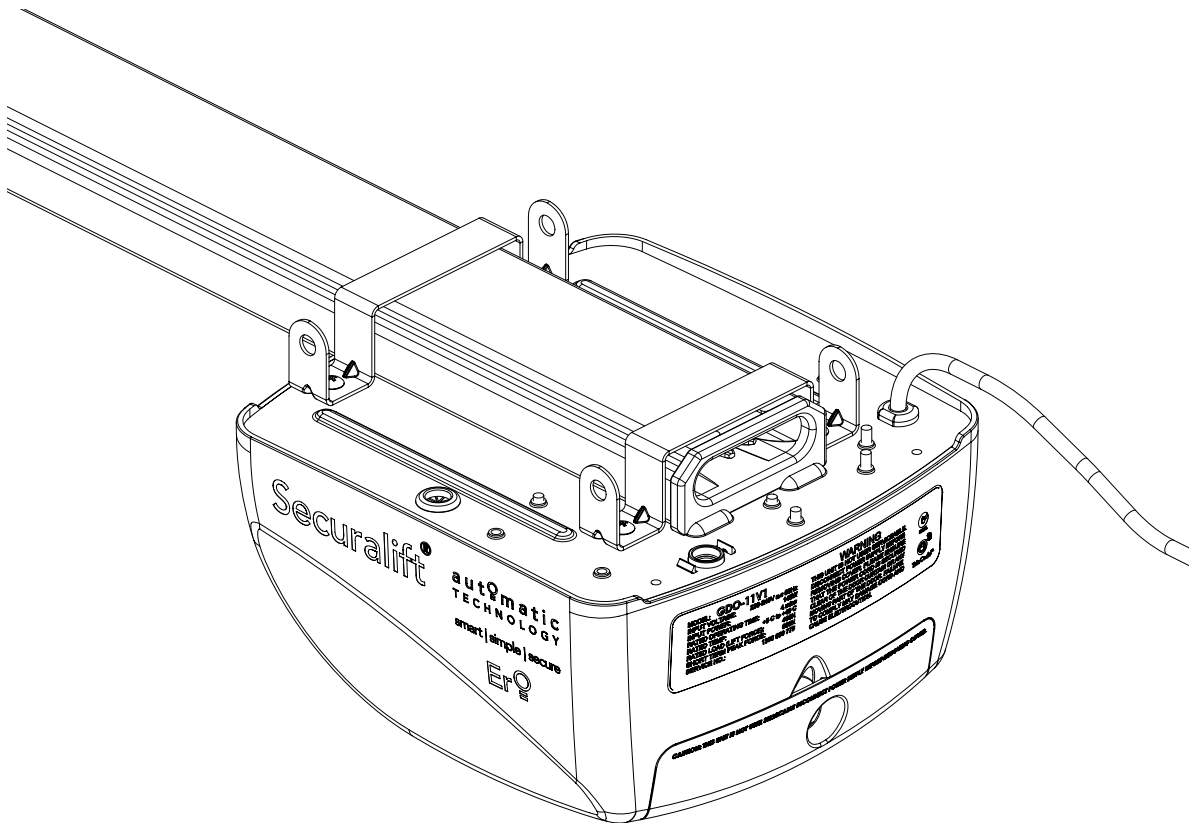

Featuring **TrioCode™** Technology

automatic  
TECHNOLOGY

smart | simple | secure



**WARNING:** It is vital for the safety of persons to follow all instructions. Failure to comply with the installation instructions and the safety warnings may result in serious personal injury and/or property damage. Please save these instructions for future reference.

Automatic Technology (Australia) Pty Ltd to the extent that such may be lawfully excluded hereby expressly disclaims all conditions or warranties, statutory or otherwise which may be implied by laws as conditions or warranties of purchase of an Automatic Technology (Australia) Pty Ltd Garage Door Opener. Automatic Technology (Australia) Pty Ltd hereby further expressly excludes all or any liability for any injury, damage, cost, expense or claim whatsoever suffered by any person as a result whether directly or indirectly from failure to install the Automatic Technology (Australia) Pty Ltd Garage Door Opener in accordance with these installation instructions.



# GDO-11v1 SecuraLift®

## Overhead Garage Door Opener

Important Safety Instructions	4		
Features	6		
Operating Controls	8		
Kit Contents	10		
Installation	11		
Knockdown C-Rail Assembly	11		
C-Rail Attachment	13		
Determine Door Type	14	Accessories	25
Mounting - Track Type Door	15	Photo Electric Beam Installation	25
Mounting - Spring Loaded Door	16	Key switch	25
Mounting Door Bracket & Arms	17	Auxiliary output	25
Programming the Opener	18	Battery Back Up installation	26
Setting Travel Limits - Control Panel	18	SmartSolar™ Installation	27
Setting Travel Limits - Transmitter	19	Final Set Up	28
Safety Obstruction Forces	20	Pet Mode Door Height	28
Safety Obstruction Force Test	20	Wall Mounted Transmitters	28
Adjusting Safety Obstruction Forces	21	Re-Initialising	28
Coding Transmitters	22	Default Settings & Specifications	29
Door	22	Parameters	30
Vacation Mode	22	Door Status Indicators	30
Auxiliary Out Put	22	Button functions	30
Pet Mode	23	Troubleshooting Guide	31
Courtesy Light	23	Maintenance Record	32
Remotely Coding Transmitters	24	Parts Listing	33
Erasing Transmitter Codes	24	Warranty	34





# Important Safety Instructions

**WARNING: It is vital for the safety of persons to follow all instructions. Failure to comply with the following Safety Rules may result in serious personal injury and/or property damage.**

**CAUTION:** If your garage has no pedestrian entrance door, an emergency access device should be installed. This accessory allows manual operation of the garage door from outside in case of power failure.

For **ADDITIONAL ENTRAPMENT** protection we **STRONGLY** recommend the fitting of a Photo Electric (P.E.) Beam. In most countries P.E. Beams are mandatory on all garage doors fitted with automatic openers. For a small additional outlay Automatic Technology recommends that Photo Electric Beams be installed with the automatic opener ensuring additional safety and peace of mind.

**DO NOT** operate the opener unless the garage door is in full view and free from objects such as cars and children/people. Make sure that the door has finished moving before entering or leaving the garage.

**DO NOT** operate the opener when children/persons are near the door. Children must be supervised at all times when the SecuraLift® is in use. **Serious personal injury** and/or property damage can result from failure to follow this warning.

**DO NOT** allow children to operate the SecuraLift®. **Serious personal injury** and/or property damage can result from failure to follow this warning.

Regularly check to make sure that the **safety obstruction force** is working correctly, and is **tested** and set as per **page 20 of this manual**. Failure to follow these instructions could result in **serious personal injury** and/or property damage. This test must be repeated at regular intervals and the necessary adjustments made as required.

Doors requiring over 400N of force to move must have P.E. Beams installed.

**DO NOT** disengage the door opener to manual operation with children/persons or any other objects including motor vehicles within the doorway.

The door opener is not intended for use by young children or infirm persons without adequate supervision. Children should be supervised to ensure that they do not play with the remote transmitters or the opener.

Keep hands and loose clothing **clear** of the door and door opener at all times.



# Important Safety Instructions

The unit should be installed so that it is protected from the elements. It should not be exposed to water or rain. It is not to be immersed in water or sprayed directly by a hose or other device.

The garage door must be **well balanced**. Sticking or binding doors must be repaired by a qualified garage door installer prior to installation of the opener.

Frequently examine the installation, in particular cables, springs and mountings for signs of wear, damage or imbalance. **DO NOT** use if repair or adjustment is needed since a fault in the installation or an incorrectly balanced door may cause injury. **DO NOT** attempt to repair the door yourself as hardware is under extreme tension.

**Remove or disengage** all garage door locks and mechanisms prior to installation of the opener.

Connect the opener to a properly **earthed** general purpose 240V mains power outlet installed by a qualified electrical contractor.

**Disconnect the power cord** from mains power before making any repairs or removing covers. Only **experienced** service personnel should remove covers from the opener.

In order for the SecuraLift® to **sense** an object obstructing the door way, some **force** must be exerted on the object. As a result the object, door and/or person may suffer **damage** or **injury**.

If the power supply cord is damaged, it **must** be replaced by an Automatic Technology service agent or suitably qualified person.

Make sure that the door is fully open before driving in or out of the garage and fully closed before leaving the driveway.

Make sure that remote controls are kept out of reach of children.

Install the (optional) wall switch or (optional) wall mounted transmitter in a location where the garage door is visible, but out of the reach of children at a height of at least 1.8 meters from the floor.





# Features

Thank you for purchasing the Automatic Technology **GDO-11v1 SecuraLift®** Overhead Garage Door Opener. Designed to suit sectional overhead and one piece tilt up doors, the components and materials used ensure this opener will provide years of smart, simple and secure operation. Listed below are some of the many features:

## Operation

To open or close the door simply press a button on a TrioCode™ handheld transmitter, or optional wall switch for two seconds. During open and close cycles the door can be stopped by pressing the button again. The next actuation will move the door in reverse direction.

## TrioCode™ Code Hopping Technology

Every time a TrioCode™ transmitter is used a new security code is randomly generated from over 4.29 billion possibilities. This greatly enhances the security of the system and makes “code grabbing” a thing of the past

These transmitters also overcome interference issues by simultaneously sending a signal over three different frequencies. Even if two of the three signals are jammed, the system will still work.

## S-ALPS (Semi Automatic Limits Positioning System)

The S-ALPS system does away with manual adjustment of the door's limits position using mechanical parts, such as cams and microswitches. During installation the handheld transmitter can be programmed to set the limits positions.

## ISS (intelligent safety obstruction system)

While the door is performing a close cycle, should it hit an obstacle or be restricted in some manner, it will automatically reverse. The amount of force the door should encounter before reversing is automatically adjusted by the doors control system during the initial installation of the automatic door opener. The door will also stop if restricted whilst opening. The Safety Obstruction Force should be checked monthly.

## Auto courtesy light

The courtesy light comes on automatically for three minutes whenever the door is activated. The light can also be operated independently of the door by coding a dedicated button on a transmitter.





### **SmartSolar™ and Battery Back Up Compatibility (optional)**

The opener can be fitted with a SmartSolar™ or Battery Back Up kit for operation in the event of a power outage, or where mains power access is not available.

**NOTE:** If the door is the only entrance to the garage, and a battery back up kit is not fitted, a keyed cable release should be fitted external to the garage.

### **Vacation mode**

A hand held transmitter can be programmed to lock and unlock all other transmitters that have been programmed into the openers' memory. The vacation mode can be used when the door is left idle for long periods of time.

### **Pet/Pedestrian mode**

The transmitter can be programmed to open the door to an adjustable partial height so that the family pet can enter and exit the garage at any time. You may also wish to open the door to a height suitable only for pedestrian access.

### **Photo Electric (P.E.) Beam (optional)**

The opener has an input to connect a P.E. Beam for extra safety.

### **Manual operation**

The opener is equipped with a unique manual disengaging device. If the power to the opener is disrupted the door can be put into manual mode by pulling down on the string handle on an angle towards the door. This allows for manual operation of the door. To re-engage the opener pull the string handle away from the door.





# Operating controls

## 01 Terminal Block.

- » 24V PWR is used to power photo electric beam.
- » PE (Input) for photo electric beam for safety.
- » PE (0v) is used to supply 0 volts to photo electric beam.
- » GND is used with OSC input or AUX out put
- » O/S/C INPUT is used for the connection of a wired switch (momentary contact). This switch can then be used to open, stop or close the door. Install the wall switch in a location where the switch is out of reach of children and the garage door is visible.
- » AUX (output) can be used to control alarm system .

02 **CODING LED** (red) light flashes when a code is being stored or when a transmitter button is pressed.

03 **DOOR CODE BUTTON** is used for storing or erasing transmitter buttons for door operation

04 **DOOR STATUS LED** (Yellow)

05 **SET** button (Orange) is used during the installation phase together with the Open and MINUS (-) buttons to set the door limit positions. The Set button is also used to re-initialize the Opener.

06 **OPERATE** button (Yellow) is used during installation to test the open, stop and close cycles for the opener. The opener has to be initialised by the set button to make the OPERATE button operable.

07 **FORCE MARGIN SET** Button: The obstruction force margin is set automatically during installation. The margin can be adjusted manually using the Force Margin Set button (White). Holding the Force Margin Set button and pressing PLUS (+) or MINUS (-) buttons will increase or decrease the amount of force. The Force Margin Set should only be used if environmental factors (wind, etc.) affect the door's operation.

08 **OPEN LIMIT LED** (green) the LED is very helpful during installation. It illuminates and flashes when the door is opening and remains steady on when the open limit position has been reached.

09 **PLUS (+)** button (green) is used during installation to help set the open limit position. Pressing and holding this button will move the door in the open direction, releasing stops the door.  
**NOTE:** The safety obstruction detection is inoperable when the PLUS (+) button is used to move door.

10 **CLOSE LIMIT LED** (red) the LED is very helpful during installation. It illuminates and flashes when the door is closing and remains steady on when the close limit position has been reached.

11 **MINUS (-)** button (red) is used during installation to help set the close limit position. Pressing and holding this button will move the door in the close direction. Movement stops when the button is released.  
**NOTE:** The safety obstruction detection is inoperable when the CLOSE button is used to move door..

12 **DATUM ADJUST SCREW** is used during limits set up to indicate the mid point of the door's travel.

13 **10A FUSE**

14 **PROG INPUT** is used to connect the Automatic Technology Handheld Programmer "PG-3" for editing control and receiver functions, accessing diagnostic tools, and activating special features and operating modes.

15 **JP1 SOLAR CONNECTOR** onto this the shunt must be fitted for solar operation.

16 **COURTESY LIGHT** 15 watts 24 volts feston type globe is used for courtesy light






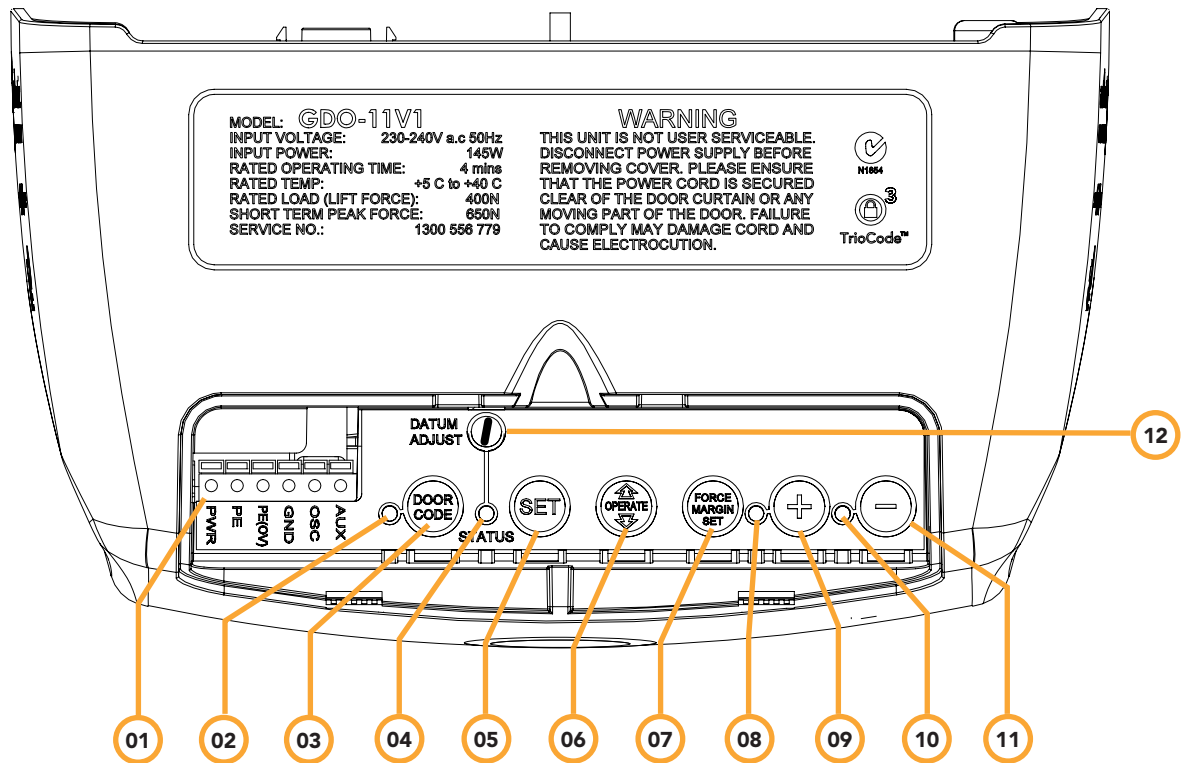



fig 01



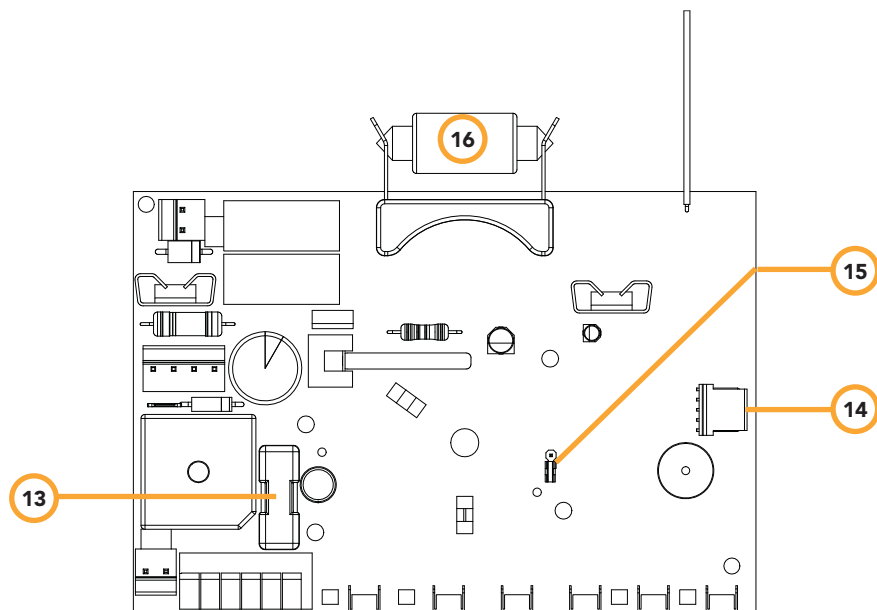

# Kit contents

fig 02

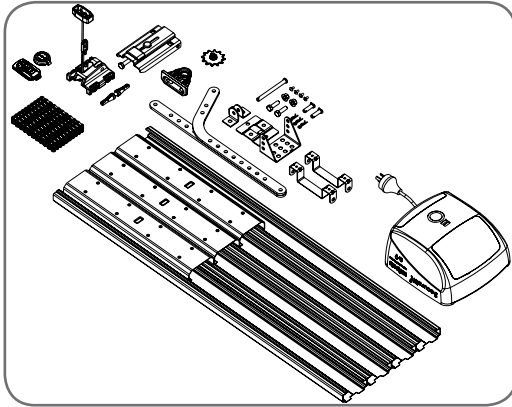


## GDO-11v1 Multipiece C Rail And Accessory

- 1 x GDO-11v1 SecuraLift® Ero drive unit (Fig. 02)
- 1 x TrioCode™ Transmitter pack (Fig. 02)  
(Pack includes 1x four button keyring transmitter and 1x two button keyring transmitter with batteries)
- 2 x Door attachment arms (Fig. 02)
- 1 x Accessory and hardware pack (Fig. 02)
- 1 x Chain (Fig. 02)
- 1 x C rail track pack (Fig. 02)  
(Pack includes three C rail sleeves and four C rail tracks)
- 1 x Shuttle assembly (Fig. 02)
- 1 x Installation Manual

OR

fig 03

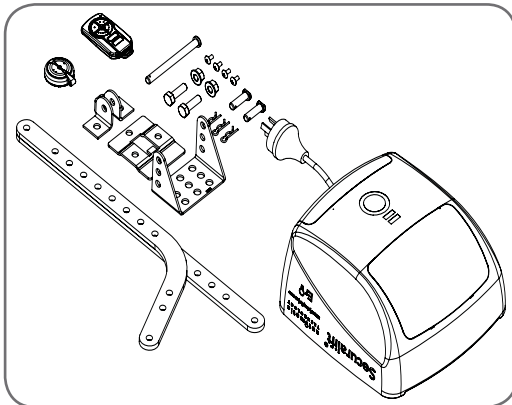


## Power Head And Accessory pack

- 1 x GDO-11v1 SecuraLift® Ero drive unit (Fig. 03)
- 1 x TrioCode™ Transmitter pack (Fig. 03)  
(Pack includes 1x four button keyring transmitter and 1x two button keyring transmitter with batteries)
- 2 x Door attachment arms (Fig. 03)
- 1 x Accessory and hardware pack (Fig. 03)
- 1 x Chain (Fig. 03)
- 1 x Shuttle assembly (Fig. 03)
- 1 x Installation Manual

PLUS

fig 04

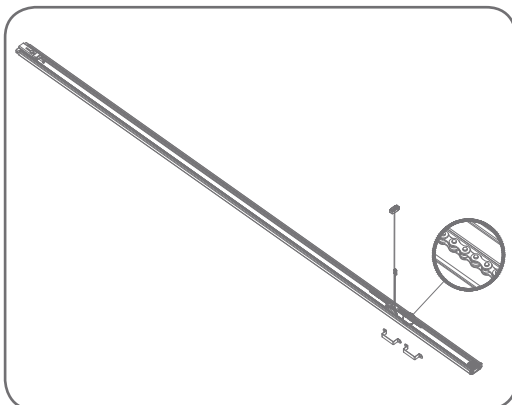

## Pre-Assembled Single Piece C-Rail

Note: The chain or belt in the single piece rail has been tensioned by the factory.

IMPORTANT NOTE: If modification to the track length is required, adjustment must be made to the drive end side only.



# Knockdown C-Rail Assembly

## Step 1 - Knockdown C-Rail Assembly

Note: If your opener came with a one piece track, proceed to Assembly step 2, page 13.

- Place track pieces on flat surface for assembly. All the track sections are interchangeable.
- Slide sleeve onto the track section (Fig. 05). Connect track by sliding sleeve onto next track section. Tap track assembly on piece of wood until track sections are flush. Repeat with remaining track sections.
- Remove chain from package and lay chain out on floor (do not allow chain to twist).
- Loop the chain onto the pulley of tension chain assembly. Slide the tension chain assembly with chain into the track (Fig. 06).
- Slide shuttle assembly into (opener end) the track assembly, be sure to insert shuttle assembly with hole side toward the door as shown with arrow in (Fig. 07). Push the sprocket support into (opener end) of the track.
- Feed the chain through the shuttle assembly then through the sprocket support and loop around the sprocket then feed back through the sprocket support and shuttle assembly. Join to chain index with chain links (supplied) (Fig. 07).

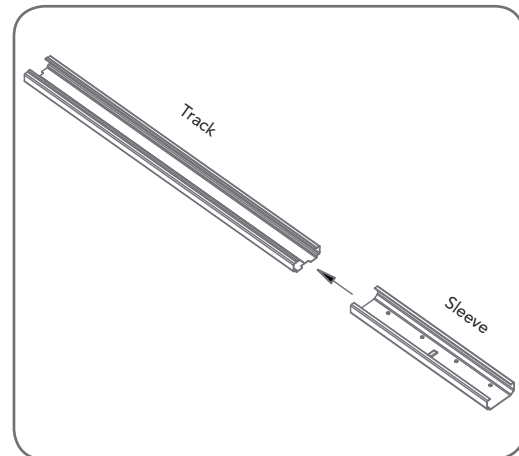


fig 05

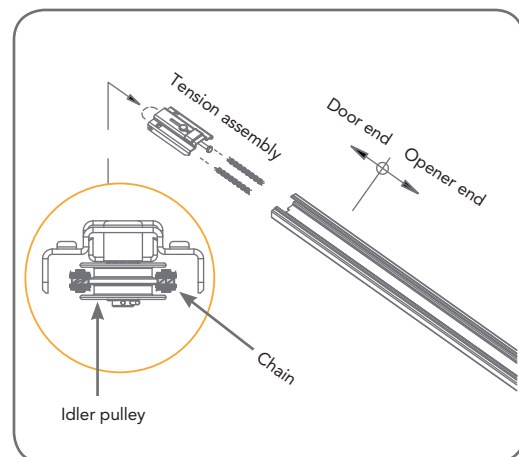


fig 06

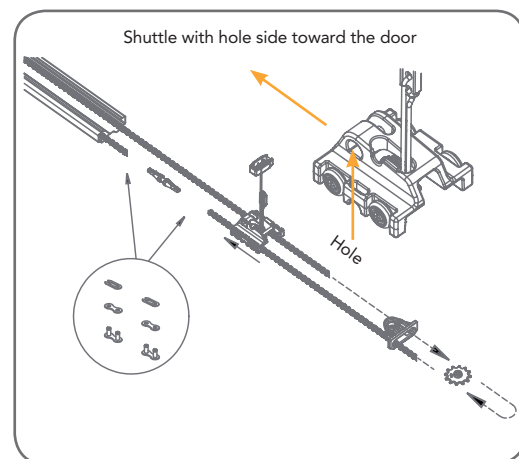



fig 07





# Knockdown C-Rail Assembly

fig 08

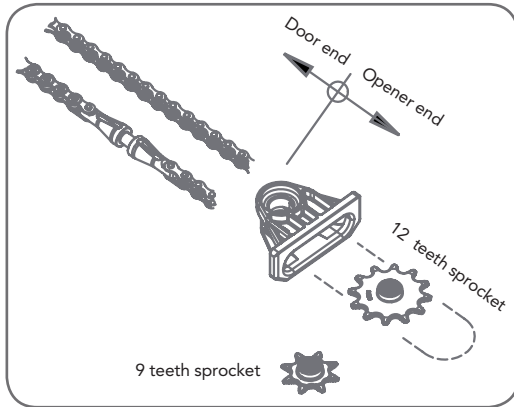

Note: Use the 12 teeth sprocket with Gdo-11v1 opener.

- h. Engage the shuttle with the chain index and move shuttle assembly to the centre of track. Make sure the chain is engaged into the sprocket and also wrapped around the centre of the pulley.
- i. Use a spring scale to measure required force to pull the shuttle, adjust 1/2" tension hex bolt (Fig. 09) to tension the chain.
- j. Move the shuttle back to the centre of the track to re-test the force with spring scale (Fig. 10).
- k. Continue to adjust the tension hex bolt until a force of 8kg to 8.5 Kg is achieved.

fig 09


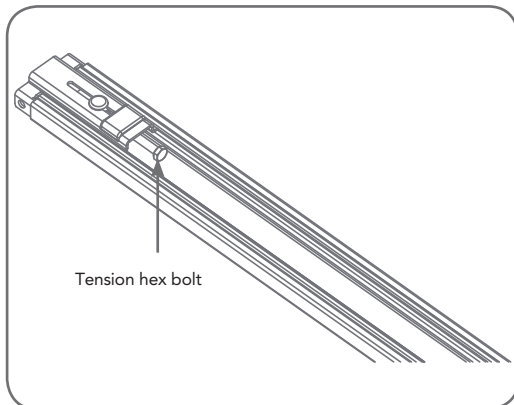


fig 10



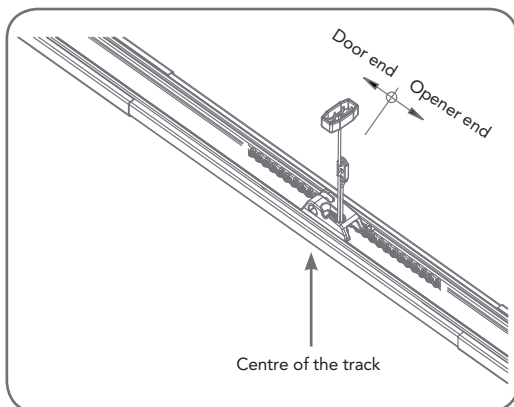

# C-Rail Attachment

## Step 2 - Secure C-Rail to Drive Unit

- Locate and insert the shaft of drive unit into the C-Rail's sprocket (**Fig. 11**).
- Fix the two track brackets with four screws supplied in accessory pack (**Fig. 12**).

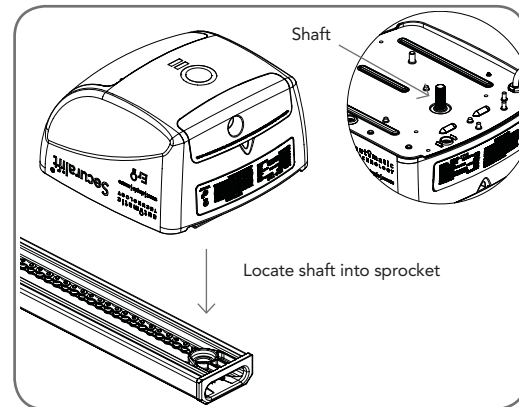


fig 11

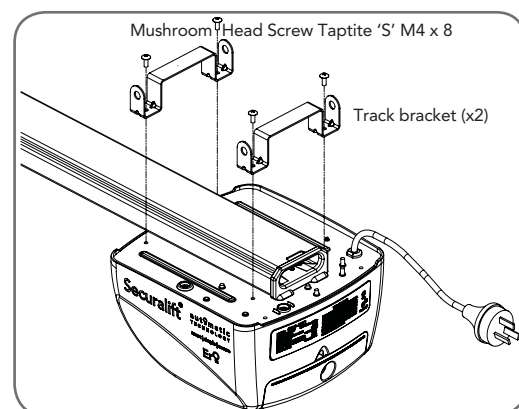



fig 12





# Determine the Door Type

fig 13

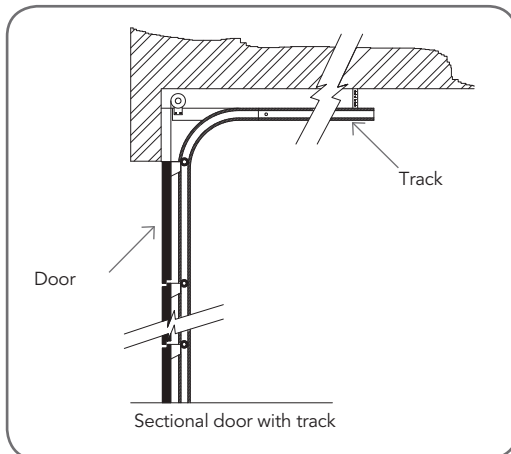


## Step 3 - Determine Door Type

Determine which type of garage door you have as illustrated below. (**Fig. 13 to 15**).


For a sectional (panel) door on tracks (**Fig. 13**) proceed with the installation from Step 4.

fig 14

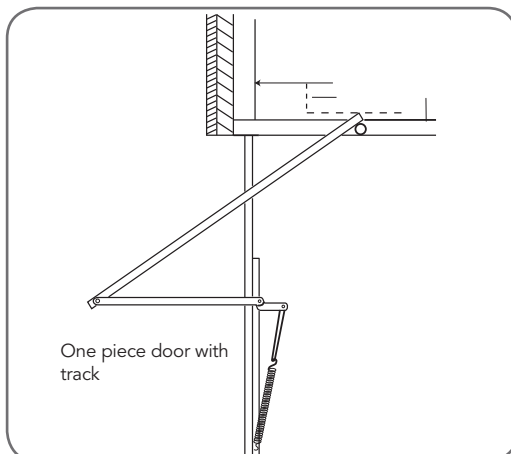

For a one-piece door on tracks (**Fig. 14**) proceed with the installation from Step 4.

fig 15

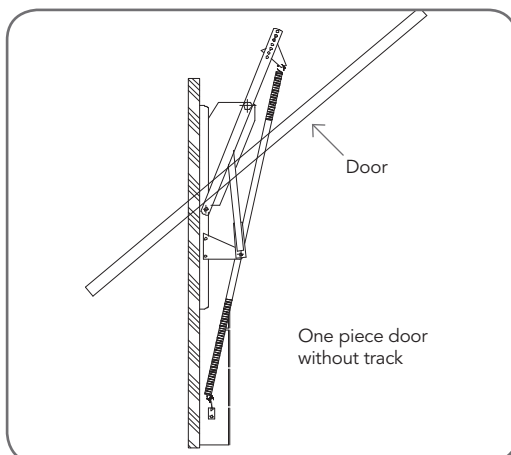

For a one-piece door without tracks (on springs) (**Fig. 15**) proceed with the installation from Step 8.



# Mounting on a Track Type Door



**WARNING:** The opener must be securely fastened to structural supports, otherwise opener failure may ensue causing serious personal injury and/or property damage.

## Step 4 - Determine Bracket Position

- Open the door and find the highest point of travel of the top door panel.
- Using a level, transfer this height to the wall above the door (**Fig. 16**) and mark a line 60mm above it.
- Determine the centre point on the wall above and on top of the door. Draw two lines extending 21.5mm from each side of the centre point. (**Fig. 17**)

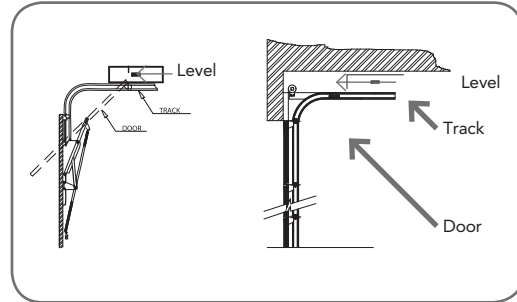


fig 16

## Step 5 - Mounting the Wall Bracket

- Centre the bracket over the intersection of these two lines. Mark centres for at least two holes (**Fig. 17**).
  - Ensure this is into a solid mounting point
- Drill holes into the wall with an appropriate bit.
- Secure to the wall using:
  - IF CONCRETE OR BRICK - 8mm (5/6") loxins/dynabolts.
  - IF TIMBER - wood screw #20 or similar (min. 50mm).

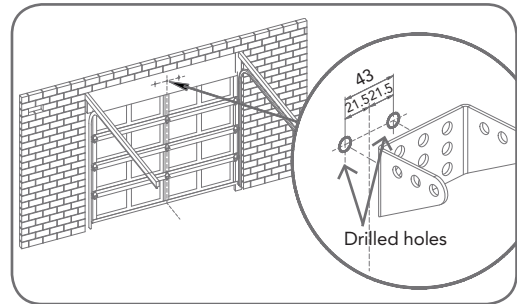


fig 17



**WARNING:** Make sure concrete, brick wall or timber lintels are solid and sound so as to form a secure mounting platform.

## Step 6 - Attach the Rail to the Wall Bracket

- Attach the C-Rail assembly to the wall bracket with the 90mm long clevis pin and secure with the supplied snap pin (**Fig. 18**)
- Leave the powerhead in its packing box for protection during installation.

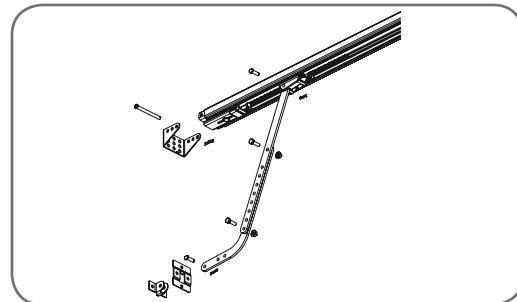


fig 18

## Step 7 - Secure the Powerhead to the Ceiling

- Raise the powerhead from the packing box and support it in the horizontal position with a step ladder or with a similar rigid object.
- Open the garage door. Rest the opener on the open door and use a scrap piece of wood to bring it to horizontal level.
- Line up the track perpendicular to the wall.
- Secure the perforated angle (not supplied) to the ceiling above where powerhead's mounting holes will be once fully installed. A representative mounting is shown (**Fig. 19**)
- Connect the powerhead to the ceiling mounted perforated angle with M8x20mm screws and nuts. Strips should not extend more than 18mm below centre of powerhead mounting holes.

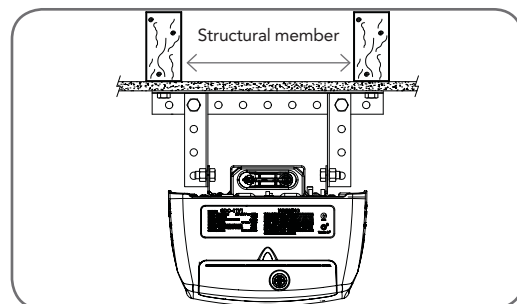


fig 19


Go to Step 12 on page 17.





# Mounting on a non-Track Type Door

fig 20

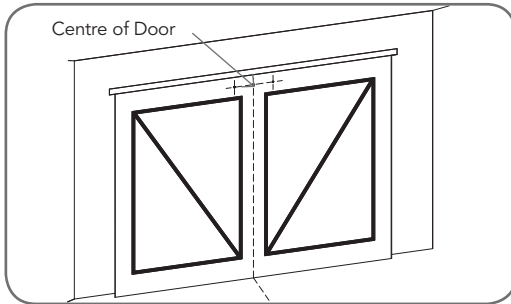

**WARNING:** The opener must be securely fastened to structural supports, otherwise opener failure may ensue causing serious personal injury and/or property damage.

## Step 8 - Determine the Door's Centre

- Find the centre of the door and mark this location both above the door and on top of the door.
- Draw two lines 21.5mm either side of this (**Fig. 20**).

## Step 9 - Prepositioning the Opener

- Raise the door to open position.
- Rest the opener on the top edge of the door with end of the rail against the wall (**Fig. 21**).
- Support the powerhead level with the lowest point of the open door (**Fig. 21**).

**NOTE:** Do not slide rail along the face of the door.

fig 21


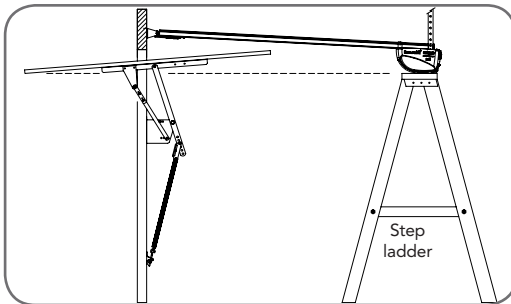


fig 22

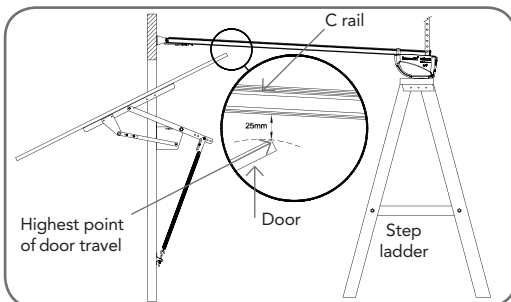


**WARNING:** Make sure concrete, brick wall or timber lintels are solid and sound so as to form a secure mounting platform.

## Step 11 - Secure the Powerhead to the Ceiling

- Secure the perforated angle (not supplied) to the ceiling above where powerhead's mounting holes will be. See (**Fig. 19**) for a representative mounting.
- Connect the powerhead to the ceiling mounted perforated angle with M8x20mm screws and nuts. Strips should not extend more than 18mm below centre of powerhead mounting holes (**Fig. 19**).

fig 23

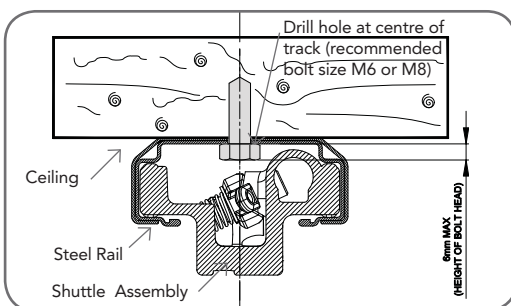

## Step 11.1 - Alternative Mounting Option

The opener can be fastened to the roof by driving a bolt through the C-Rail into a structural timber support. The bolt head's height must not exceed 6mm (**Fig. 23**).





# Mounting Door Bracket & Arms

## Step 12 - Mounting Door Bracket

The door bracket comes in two parts. The bottom plate with two mounting holes is used on its own for one piece doors. For sectional doors, the top plate is placed over the bottom plate and is fixed with four (4) screws (**Fig. 24**).

- Mount the door bracket, or bracket assembly, on the door's centre line one-third down the top panel (**Fig. 24**) using M6 or equivalent screws (not supplied),
- STEEL DOORS ONLY: Bracket can be welded in place.



**NOTE:** If in doubt about the door's strength, reinforcement may be added to the door's frame where necessary. Door damage may occur if the bracket is installed on a panel with insufficient strength. The opener's warranty does not cover damage caused to the door and/or door panels.

## Step 13 - Attaching the Arms

FOR SECTIONAL AND ONE PIECE DOORS WITH TRACK:

- Assemble the bent arm(connecting to the door) to the right side of the straight arm (connecting to the shuttle) with bolts and nuts supplied in the accessory pack (**Fig. 25**). Always use both bent and straight arms.
- Connect the assembled arm to the bracket and the disengaged trolley with clevis and snap pins. The angle "A" must be more than 10° (**Fig. 26**).



**WARNING:** Connecting the bent arm other way around may damage the door. The straight arm should not protrude beyond heel of bent arm

FOR ONE PIECE DOORS WITHOUT TRACK

- Assemble the bent and straight arms as shown in (**Fig. 27**) with bolts and nuts supplied in the accessory pack. Always use both the bent and straight arms.
- Connect the assembled arm to the bracket and the disengaged trolley with clevis and snap pins.
- If installing on a door with a bad wave action, lengthening the arm will assist in reducing this effect.



**IMPORTANT NOTE:** Adjust the length of the cord so that its toggle is no more than 1.8m from the ground.

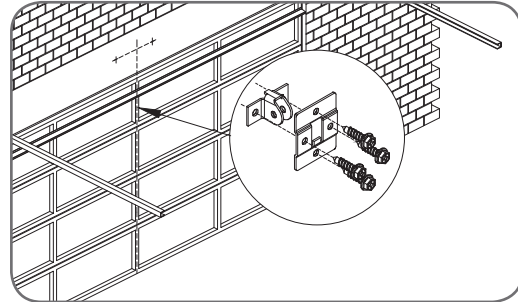


fig 24

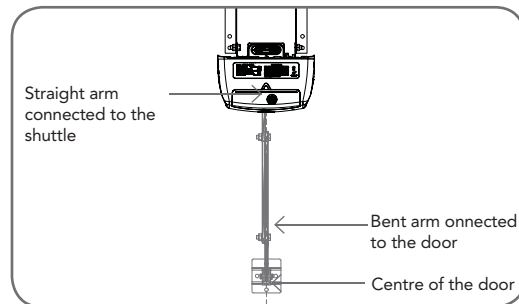


fig 25

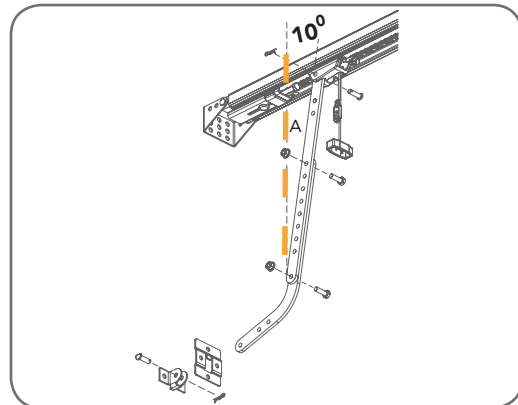


fig 26

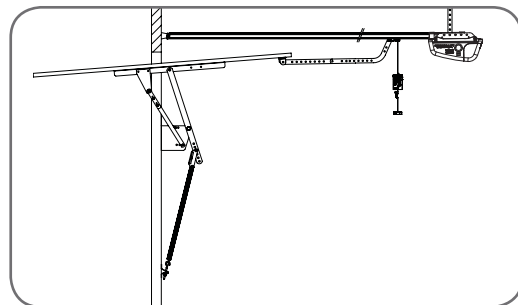



fig 27





# Setting Limits

fig 28

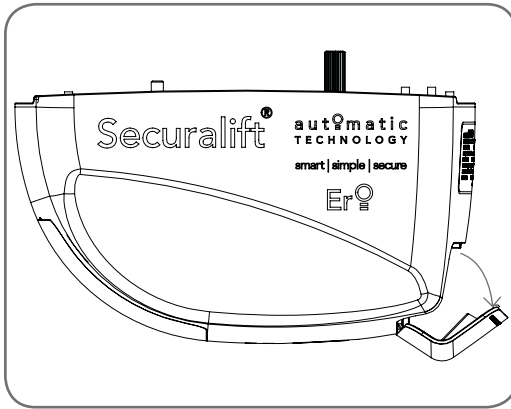

**NOTE:** If P.E. Beams are to be used they must be installed before setting the travel limits.

## Step 14.1 - Remove Controls Cover

- Swing open the controls cover to gain the access to the controls panel (**Fig. 28**) and swing back into its position when setup is completed.

## Step 14.2 - Connect Power to the Powerhead

Plug the power cord into a mains point and switch power on. The red CLOSE LIMIT LED will be flashing.




**WARNING:** The safety obstruction detection system is inoperable while MINUS (-) and PLUS (+) drive buttons are being used and travel limits are not set.

## Step 14.3 - Set the Datum Position

- Press and hold the MINUS (-) or PLUS (+) buttons to move the door to the halfway position. Ensure that the door, shuttle and chain index are engaged.
- Using a small screwdriver, turn the DATUM ADJUST screw until the STATUS LED comes on (**Fig 29**).
  - If the STATUS LED is already illuminated when the door is halfway up, turn the DATUM ADJUST screw until the light goes off, then turn back one notch to illuminate again.

fig 29

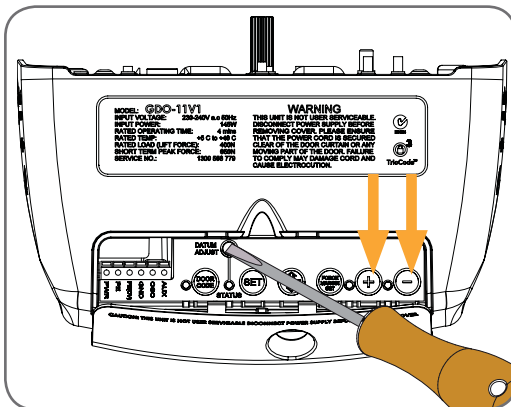

## Step 14.4 - Set the Limits Positions


- Press and hold the MINUS (-) button until the door reaches the desired close limit position. Single presses will inch the door closed (**Fig 30**).
- Press the LIMIT SET button to store the close position into memory (**Fig. 30**)
- Press and hold the PLUS (+) button until the door reaches the desired open limit position. Single presses will inch the door open (**Fig. 30**).



**IMPORTANT WARNING:** The door will automatically close, open and close again **once Step 14.4(d) is performed**. Ensure that no persons or objects are in the door's path.

- Press the SET button to store the close position into memory (**Fig. 30**).
- The door will now automatically close and open to calculate the safety obstruction settings. After this, the opener can be operated with the OPERATE button.

fig 30

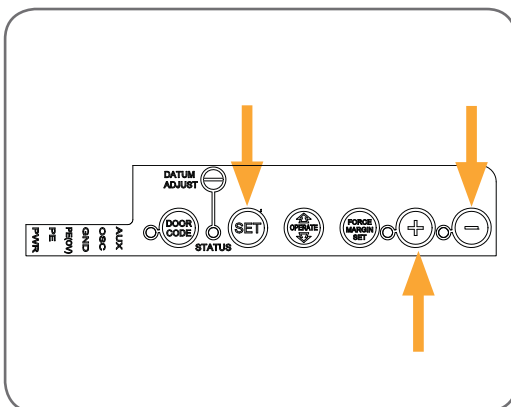

## Step 14.5 - Resetting the Door Limit Positions

Limit positions can be deleted by the following steps:

- Press and hold the MINUS (-) button for six (6) seconds until you hear three beeps and the CLOSE LIMIT LED starts to flash.
- Release the CLOSE button.
- Repeat Steps 14.1 to 14.4 to set new travel limit positions..



# Setting Limits: via Transmitter

The GDO-11v1 has the unique ability to set travel limits using the transmitter, allowing the installer to move around the garage and door to better assess the desired close and open limit positions.

## Step 15.1 - Power Up and Set the Datum

- Follow Steps 14.1 to 14.3 as outlined overleaf.  
**Observe all warnings!**

## Step 15.2 - Code a Transmitter for Limit Setting

- Press and hold the DOOR CODE button (**Fig. 31**).
- Press Button 1 on the transmitter for two seconds (**Fig. 32**). Release and pause for two seconds. Press the same button again on the transmitter for two seconds.
- Release the DOOR CODE button.

## Step 15.3 - Setting Limits via Transmitter

- Press and hold Button 4 on the transmitter to close the door. When the door is approx. 2 cm from the ground, release button 4.
- A brief press of Button 4 will allow you to "inch" the door closed. Keep doing this until the door reaches the desired close limit position.
  - » If the door is closed too far, press Button 1 to "inch" the door towards open
- When happy with the close limit position, press Button 2 to store this in memory.
- Press Button 1 to open the door. When approx. 2 cm from the desired open position, release button 1.
- A brief press of Button 1 will allow you to "inch" the door open. Keep doing this until the door reaches the desired open limit position.
  - » If the door is opened too far, press Button 4 to "inch" the door towards close.



**IMPORTANT WARNING:** The door will automatically close, open and close again **once Step 15.3 (f) is performed**. Ensure that no persons or objects are in the door's path.

- When happy with the open limit position, press Button 2 on the transmitter to store into memory.
- The door will now automatically close, open and close to calculate the safety obstruction settings. After this, the opener can be operated with the OPERATE button.

## Step 15.4 - Resetting the Door Limit Positions

Limit positions can be deleted by the following steps:

- Follow Steps 14.5 (a) and (b), as outlined overleaf.
- Repeat Steps 15.1 and 15.3 to set new travel limit positions.
  - » There is no need to re-code the transmitter (Step 15.2) upon resetting travel limits. The transmitter will still be stored in memory.

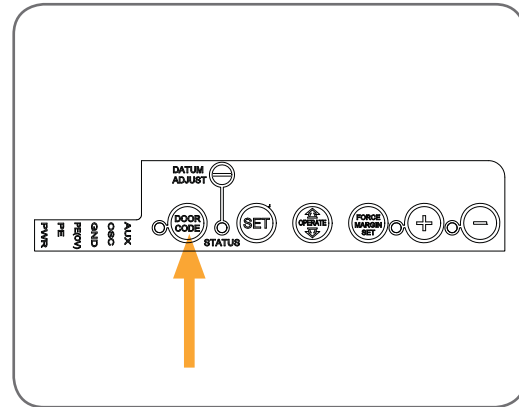


fig 31

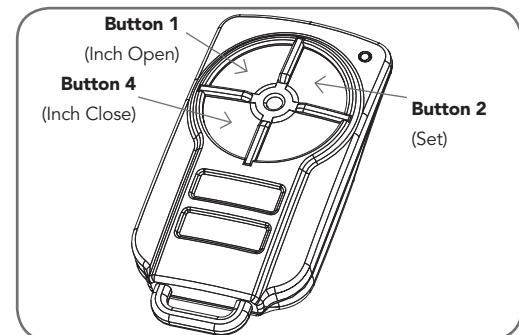



fig 32





# Safety Obstruction Force Test

fig 33

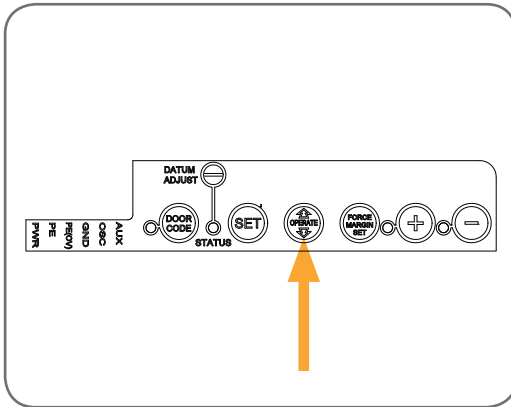

**WARNING!** Take care when testing or adjusting the Safety Obstruction Force. Excessive force may cause **SERIOUS PERSONAL INJURY** and/or **PROPERTY DAMAGE**




**WARNING!** FOR ADDITIONAL ENTRAPMENT protection we **STRONGLY** recommend the fitting of a Photo Electric (P.E.) Beam. In most countries P.E. Beams are mandatory on all garage doors fitted with automatic openers. For a small additional outlay Automatic Technology recommends that Photo Electric Beams be installed with the automatic opener ensuring additional safety and peace of mind.



**WARNING:** Photo electric beams must be installed if the closing force at the bottom edge of the door exceeds 400N (40kgf)

fig 34

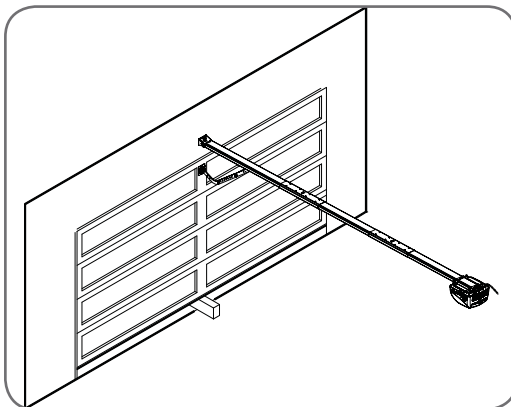

## Step 16.1 - Testing Close Cycle

- Press the OPERATE button to open the door (**Fig. 33**).
- Place a piece of timber approximately 40mm high on the floor directly under the door (**Fig. 34**).
- Press the OPERATE button to close door. The door should strike the object and start to re-open.

## Step 16.2 - Testing Open Cycle

- Press the OPERATE button to close the door (**Fig. 33**).
- Press again to open the door. When the door reaches the half open point, grab the bottom rail of the door firmly and the door should stop.
- If the door does not reverse readily when closing, or stop when opening, the force may be excessive and need adjusting, refer below.



**DANGER!** If the door fails these tests, put the opener into manual mode, only operate the door by hand and call for service.



# Adjusting Safety Obstruction Forces

## Adjusting Safety Obstruction Force

The Safety Obstruction Force is calculated automatically during setup. Adjusting this is normally only necessitated by environmental conditions such as windy or dusty areas, and areas with extreme temperature changes.



**WARNING:** Photo electric beams must be installed if the closing force at the bottom edge of the door exceeds 400N (40kgf)

### Step 17.1 - To Increase Force Pressure

- Hold down FORCE MARGIN SET button (**Fig. 35**)
- While holding the FORCE MARGIN SET button, press the PLUS (+) button. Each press increases the force margin (**Fig. 35**).
- The OPEN LIMIT LED will flash each time the PLUS (+) button is pressed to indicate a force increase
  - If the OPEN LIMIT LED on continuously when pressing the PLUS (+) button this indicates that the maximum setting has been reached.
- Test the force again as per Steps 16.1 and 16.2

### Step 17.2 - To Decrease Force Pressure

- Hold down FORCE MARGIN SET button (**Fig. 35**)
- While holding the FORCE MARGIN SET button, press the MINUS (-) button. Each press decreases the force margin (**Fig. 35**).
- The CLOSE LIMIT LED will flash each time the MINUS (-) button is pressed to indicate a force decrease
  - If the CLOSE LIMIT LED on continuously when pressing the MINUS (-) button this indicates that the minimum setting has been reached.
- Test the force again as per Steps 16.1 and 16.2

### Step 17.3 - To Recall Factory Set Force

- While holding down the FORCE MARGIN SET button, press the SET button for two (2) seconds. (**Fig. 36**)
- Release both buttons. The default setting should now be recalled.

### Step 17.4 - To Recalculate Force Margins

- Press and hold the SET Button for two (2) seconds, the beeper will sound once (**Fig. 37**).
- The door will start to move and re-calculate force margins. The door can move between the open and close limit positions up to four (4) times (depending on the position of the door and the power up condition).
- A single beep will be heard once the process is complete.
- Test the force again as per Steps 16.1 and 16.2.

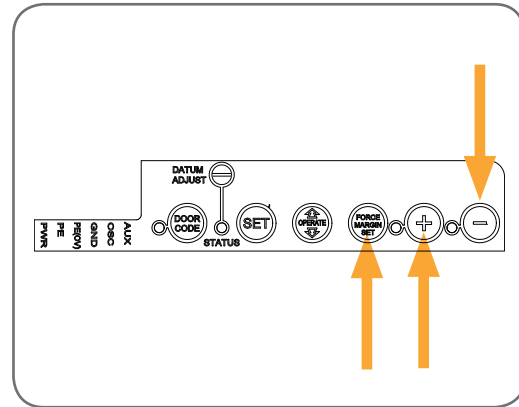


fig 35

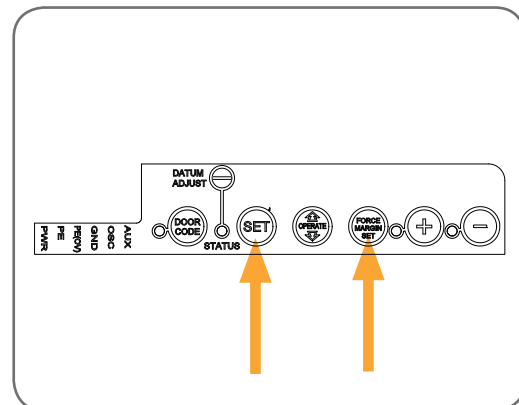


fig 36

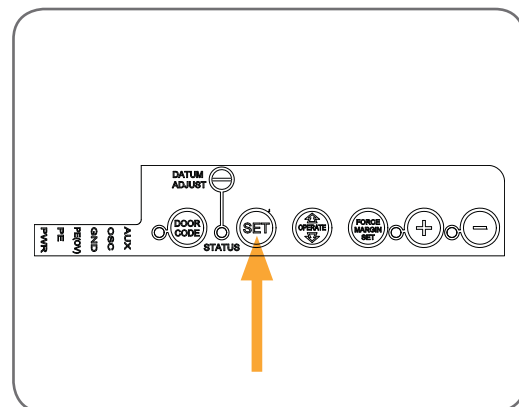



fig 37





# Coding Transmitters

fig 38

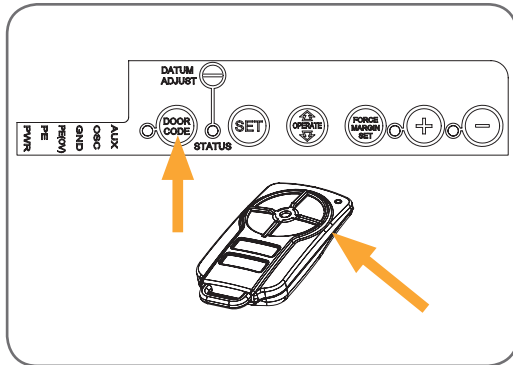

## Step 18.1 - Code a Transmitter Button for Door Operation


- Press and hold the DOOR CODE button (**Fig. 38**).
- Press one of the four buttons on the transmitter for two (2) seconds, pause for two (2) seconds, then press the same button again for two (2) seconds.
- Release the DOOR CODE BUTTON.
- Press the transmitter button to test.

## Step 18.2 - Code a Transmitter Button to Enable Vacation mode

The opener can be programmed into a "Vacation Mode" where the opener will not respond to any transmitter except the button of the transmitter the one programmed for vacation mode.

- Briefly press the DOOR CODE button once, then press it again and hold (will beep two times on second press (**Fig. 39**)).
- Press one of the four (4) buttons on the transmitter for two (2) seconds, pause for two (2) seconds, then press the same button again for two (2) seconds.
- Release DOOR CODE button.
- Press and hold the transmitter button for six (6) seconds to set Vacation Mode. the door code led will stay lit while vacation mode is active.
- To reset Vacation Mode press the same button for two seconds.


fig 39

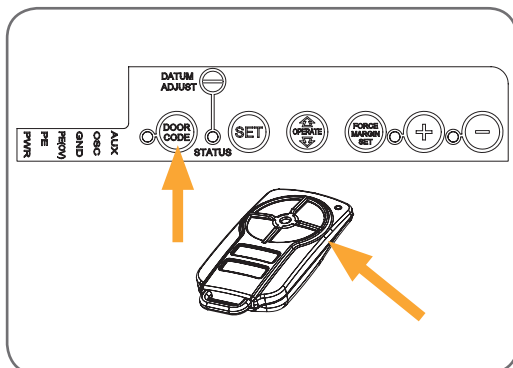

## Step 18.3 - Code a Transmitter Button to Enable AUX OUTPUT

- Briefly press the DOOR CODE button two (2) times, then press it again and hold (will beep three times on third press (**Fig. 40**)).
- Press one of the four buttons on the transmitter for two (2) seconds, pause for two (2) seconds, then press the same button again for two (2) second.
- Release the DOOR CODE button.
- Press the transmitter button to test.

fig 40

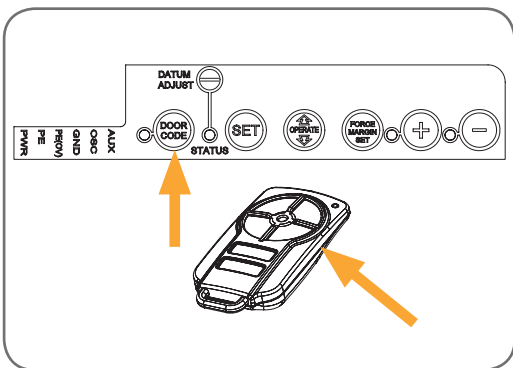



# Coding Transmitters

## Step 18.4 - Code a Transmitter Button for Pet (Pedestrian) Mode

- Briefly press the DOOR CODE button three times, then press it again and hold (will beep four times on fourth press (**Fig. 41**)).
- Press one of the four buttons on the transmitter for two (2) seconds, pause for two (2) seconds, then press the same button again for two (2) seconds.
- Release the DOOR CODE button.
- Press the transmitter button to test.
- To change the default pet (pedestrian) door opening position, refer Step 2.

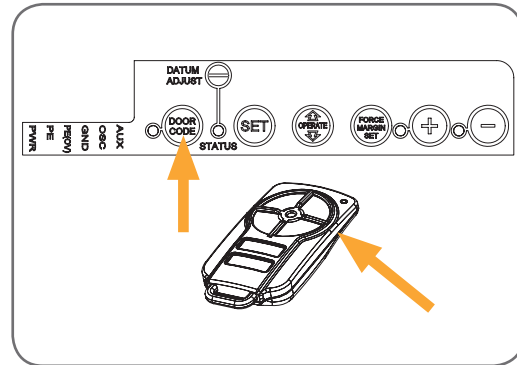


fig 41

## Step 18.5 - Coding a Transmitter Button to the Courtesy Light

The transmitter can be programmed to operate the courtesy light on the opener independently of the door moving.

- Briefly press the DOOR CODE button four times, then press it again and hold (will beep five times on fifth press (**Fig. 42**)).
- Press one of the four buttons on the transmitter for two (2) seconds, pause for two (2) seconds, then press the same button again for two (2) seconds.
- Release the DOOR CODE button.
- Press the transmitter button to test the courtesy light.

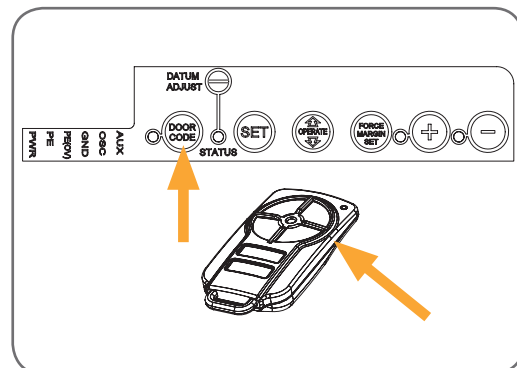



fig 42





# Remote Coding & Deleting Transmitters

fig 43

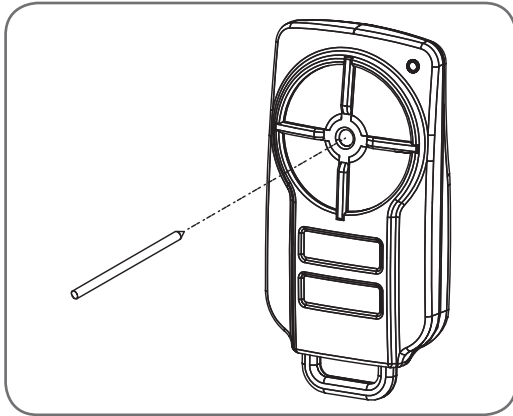

## Step 19 - Remotely Coding Transmitters


Using this method transmitters can be coded without access to the opener's control panel as long as a pre-coded transmitter is available.



**IMPORTANT NOTE:** The door or courtesy light must activate when the steps below are performed. This indicates that the pre-coded transmitter is in range of the opener, and the correct button has been pressed.

- Take any pre-coded transmitter. Press the button for the function to be duplicated and release.
- Using a small needle, press and hold firmly for two seconds through the Coding Hole (**Fig. 43**).
- WITHIN 10 SECONDS take the additional transmitter you wish to code. Decide which button that you want to activate the function to be duplicated (e.g. activate the door, or turn on the courtesy light)
- Hold the new transmitter's button for two seconds, pause for two seconds, hold again for two seconds and then release.
- Wait for 10 seconds and then press the new transmitter's button to test.


fig 44

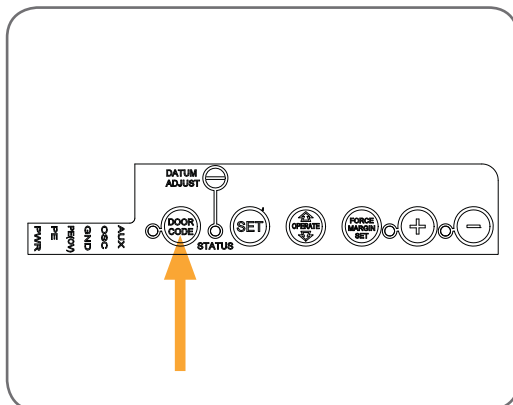

## Step 19.1 - Deleting a Stored Transmitter Code

- Select the transmitter you want to delete.
- Press and hold the DOOR CODE BUTTON (**Fig. 44**).
- Press the transmitter button you would like to delete for two seconds, pause for two seconds, press again for two seconds and then release.
- Release the DOOR CODE BUTTON. The code should now be deleted. Confirm this by pressing the transmitter button - the function (e.g. door opening) should not respond.

fig 45

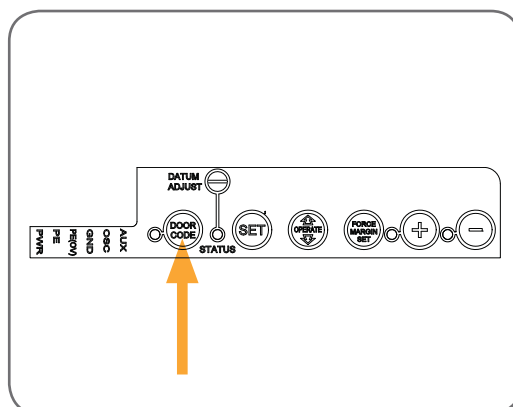

## Step 19.2 - Deleting All Transmitter Codes

- Turn off power to the opener.
- While switched off, press and hold the DOOR CODE BUTTON (**Fig. 45**). Turn on power to the opener while holding this button.
- The OPEN LIMIT, CLOSE LIMIT and DOOR STATUS LEDs will illuminate for about five seconds. These LED's will turn off and the CODING LED will illuminate.
- Release the DOOR CODE BUTTON. All stored codes will now be deleted. Confirm this pressing buttons on any previously coded transmitters - the opener should not respond.





# P.E. Beams

## Step 20 - Fitting the P.E. Beams (optional)

- Affix the P.E. Beams in a strategic location within the doorway. We recommend 150mm above the floor level and as close as possible to the door opening, inside the garage.
- Connect the wires from the P.E.Beams wiring harness to terminal block (**Fig. 46**). The wiring diagram is for Model PE-2 (Order Code 90214).
- Make sure that you are using the correct resistor i.e. 2k2 ohms (Red Red Red gold) and connecting to number 2 (two) and 4 (four) terminal on the PE-2 receiver. Make sure to align the beams correctly. Follow the manual supplied with the P.E. Beams.



**WARNING:** When using P.E. Beams, the doorway must be clear of all obstructions and persons at all times. The location of the beams and manner in which it is installed might not give safety protection at all times. Check to make sure that the height of the beam and type used give maximum protection possible.



**WARNING:** Install the P.E.Beams as per diagram in (**Fig. 46**). **Tampering with** P.E.Beams could result in serious personal injury and/or property damage and will void the warranty.

## Step 21 - key switch connection

Gdo-11v1 Has The Input To Connect Bell Switch Or Key Switch To Open Or Close The Door. Connect The Key/bell Switch As Per Diagram (**Fig. 47**).

## Step 22 - Auxiliary out put

The auxiliary output can be used to control alarm or another garage door opener. A valid transmission from the pre-coded transmitter will cause the auxiliary out put to pulse for approximately 1 (one) second. The maximum DC voltage must not exceed 35 volts DC. Maximum current must not exceed 80 ma. (**Fig. 48**).

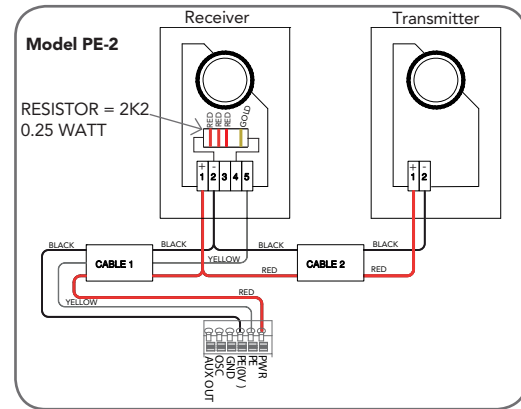


fig 46

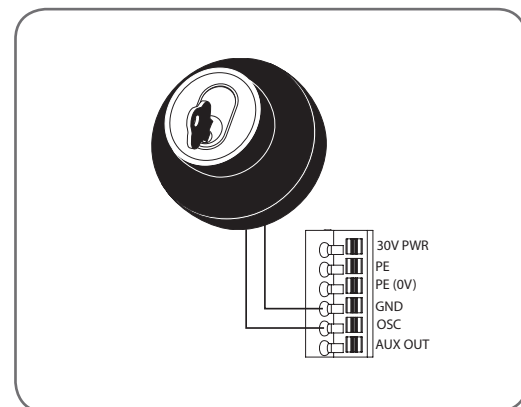


fig 47

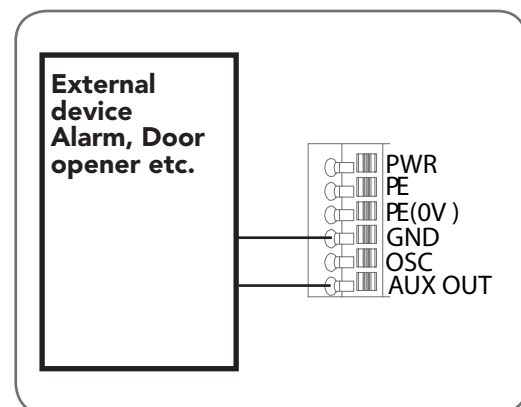


fig 48





# Battery Back Up Installation

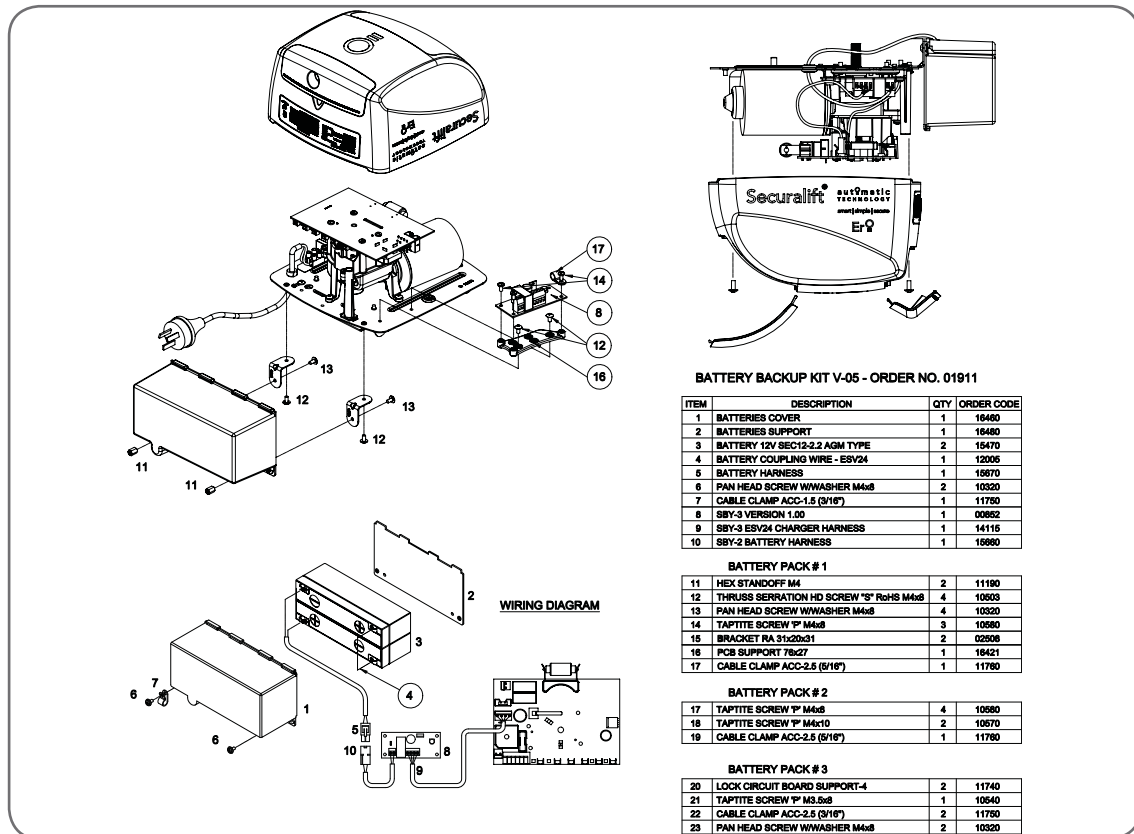


fig 49

## Step 23.1 - Connect the Battery Back Up Kit

- Disconnect power to the opener.
- Swing open the light diffuser and controls cover. Remove screws marked "S" above in fig and lift up the main cover. (Fig 49).
- Feed the SBY-3 charger harness through the grommet on the metal plate and connect to SBY-3 as shown in wiring diagram.
- Mount the brackets RA (item no 9) to battery pack with item 7 and 8
- Secure the battery pack to gdo-11 with 2 screws item no 5.
- Feed the SBY-3 battery harness (item no 3) through the grommet on the metal chassis and connect to SBY-3 as per diagram.
- Mount the pcb support (item no 10) with two screws (item no 5). Secure the SBY-3 charger board on to pcb support with 3 screws (item no 6).
- Feed charger harness from SBY-3 to the control board and plug into the 4 pin connector marked "SBY-3" onto the control board.



**WARNING:** After Step 23.1 (i) the opener may become active (even when power is off). This is a result of a residual charge in the batteries.

- Connect battery harnesses item 3 and 4 together (Fig 49).
- Reconnect power.

## Step 23.2 - Testing Battery Back Up

- Press either the OPERATE button or transmitter to test the opener.
- Whilst door is in motion disconnect mains power the door should continue to operate as normal.

**NOTE:** Wait for the door to complete its travel.

- Press the OPERATE button or transmitter to activate the door.
- Whilst door is in motion re-connect power. The door should complete the cycle as normal.

## Step 23.3 - Troubleshooting

If door stops or moves very slowly under battery power, the batteries may be weak or have no charge. Connect mains power and allow the batteries to charge. This may take 24 - 48 hours to reach maximum charge capacity.





# SmartSolar™ Installation



**WARNING:** Do not connect batteries until Step 24.3

## Step 24.1 - Mount the Charger Board

- Disconnect power to the opener.
- Swing open the light diffuser and controls cover. Remove screws marked "S" above in fig and lift up the main cover. (Fig 50).
- Remove the transformer and mains power cable.
- Mount the pcb support with two screws. Secure the SBY-3 charger board on to pcb support with 3 screws. (Fig. 51).
- Plug the solar charger Board's three wire harness (red/yellow/black) into the control board's "SBY-3" connector on the control board.
- Plug the Charger Board's white one wire harness into the control board's "24vac in" connector.
- Plug the solar shunt (supplied) onto the control board's "JP1" solar connector.

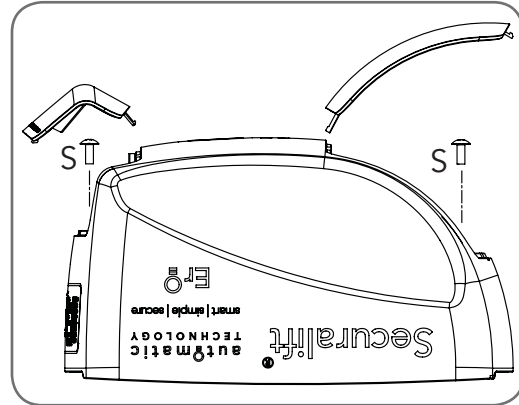


Fig 50



**IMPORTANT WARNING:** Do not connect battery or solar panel polarity incorrectly - this will result in serious damage to components.

## Step 24.2 - Connect the Solar Panel

- Mount the solar panel as outlined in the SmartSolar™ Installation Manual.
- Feed the Solar Panel's cable through black grommet located on the top of the metal plate.
- Connect the **red wire** to the Charger Board's "SOLAR+" connector, and the **black wire** to the "SOLAR-" connector (Fig. 52).

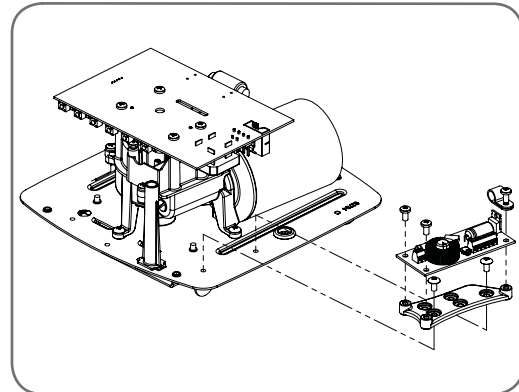


Fig 51



**WARNING:** During Step 24.3 the opener will become active.

## Step 24.3 - Mount & Connect the Battery

- Mount the Battery Box close to the opener.
- Feed the 2-core 18awg gauge cable (supplied) through the Battery Box's grommet.
- Connect the **red wire** to the Battery Box's "+" terminal, and the **black wire** to the "-" terminal (Fig. 53).
- Feed the other end of the battery cable through the drive unit's black grommet located on the metal plate.
- Connect the **red wire** to the Charger Board's "BAT+" connector, and the **black wire** to the "BAT-" connector (Fig. 52).
- Refit the light diffuser and main cover.

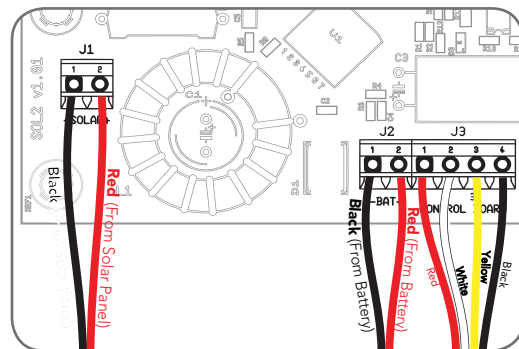


Fig 52

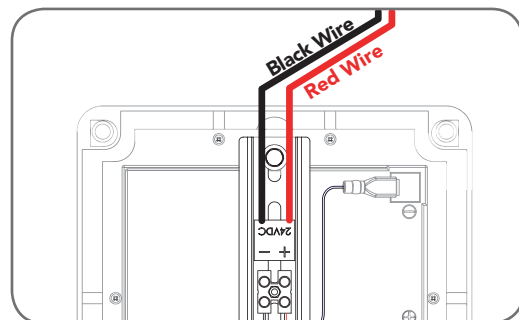


Fig 53

## Step 24.4 - Re-setup and Test the Opener


- Setup travel limits and code transmitters as per the GDO-11v1 instruction manual.
- Press either the OPERATE button or use a transmitter to operate the opener.





# Final Set Up

fig 54

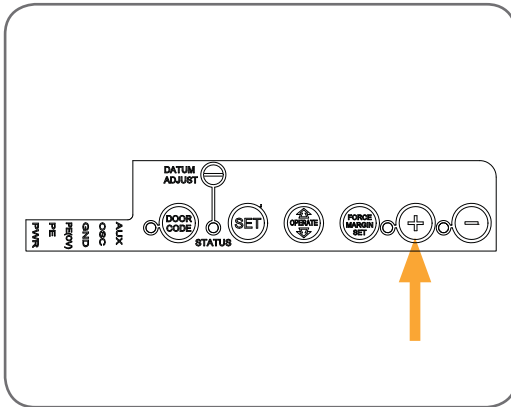


## Step 25 - Setting the Pet Mode position

The default Pet Mode height can be changed as follows:

- Make sure the door is closed, then press and hold the PLUS(+) button for six (6) seconds (**Fig. 54**), until you hear three beeps and the OPEN and CLOSE LEDs flash rapidly.
- Press the OPEN or CLOSE button to move the door to the desired pet mode open position.
- Press the SET button to record the new position.

When activated, Pet Mode drives the door to the preset position from either above or below. Pet Mode's active status is indicated by both the OPEN and CLOSE LIMIT LEDs being illuminated. If a Pet Mode button is pressed while the door is moving the door will stop. If a Pet Mode button is pressed when the door is in the Pet position, then the door will close.

fig 55

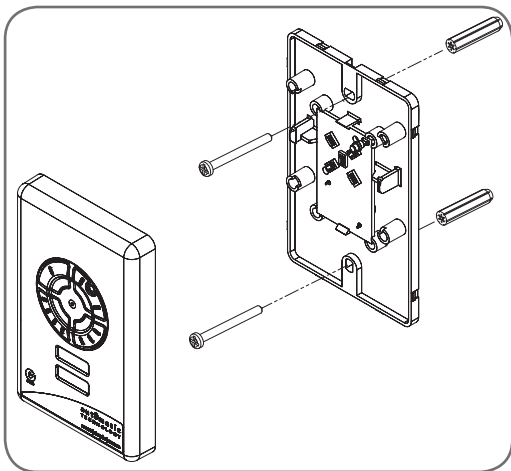


## Step 26 - Installing the Wall Mounted Transmitter (Optional)

- Remove the faceplate from the transmitter.
- Affix the baseplate in a convenient wall location (**Fig 55**) that is the door is visible from this location. but out of the reach of children at a height of at least 1.8 meters from the floor.
- Replace the faceplate.
- To code the transmitter, see Steps 10.1 through 10.4 on page 19.

## Step 27 - Reset all Factory Defaults

- Turn power to opener off.
- Press and hold the SET Button (**Fig 56**).
- Turn power on while holding the SET button. Continue to hold until all LEDs are off.
  - » This will not erase transmitter codes stored in memory.

fig 56

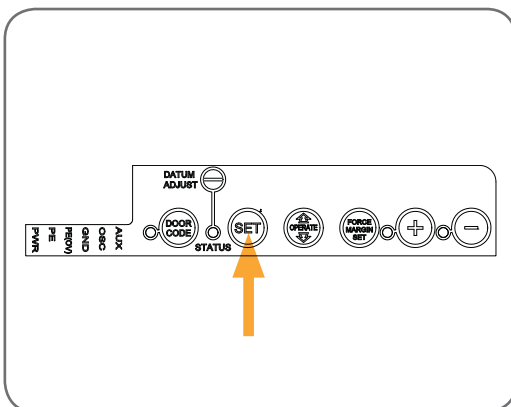



# Default Settings & Specifications

## Factory default settings

	Default	Step	Maximum
Maximum motor run time	60 Secs.	-	-
Courtesy light time	3 Mins. 10 Sec in battery back up mode		
Obstruction force margin	0.5 Amp	0.1	2 Amp

## Technical specifications

Power supply	230V - 240V AC 50Hz
Transformer rating	72 VA
Standby power	2.2 Watts
Motor power	90 Watts
Motor type	24V DC permanent magnet
Shuttle travel distance in the C-Rail	3.1m approx (standard)
Maximum shuttle travel distance in the C-Rail	4m (with extended C-Rail)
Maximum door opening: (With 3160mm Standard track)	Width: 5500mm (12m <sup>2</sup> ) Height: 2150mm Weight: 80 kg
Minimum Clearance (Bottom of C-Rail to highest point of door travel)	25mm
Short term peak force	650N (65kg)
Lift force	400N (40kg)
Nominal force	150N (15kg)
Receiver type	Multi-frequency FM Receiver
Receiver code storage capacity	8 x 4 button transmitter codes
Transmitter frequency	~ = to 433.92 MHz
Coding type	TrioCode™
Number of code combinations	Over 4.29 billion random codes
Code generation	Non-linear encryption algorithm
Transmitter battery	CR 2032
Courtesy light	Festoon style lamp 24 volts 15 watts
Controller fuse	10A slow blow

**NOTE:** Intermittent operations may occur in areas which experience very strong winds. The strong wind puts extra pressure on the door and tracks which may in turn trigger the safety obstruction detection system intermittently.  
P.E Beams should be fitted as added safety in case of entrapment.





# Parameters

## Door Status Indicators

Door Opener State	OPEN LED (Green)	CLOSE LED (Red)	Beeper
Open	On		
Close		On	
Opening	Flashing		
Closing		Flashing	
Door travel stopped	Flashing	Flashing	
Door obstructed when opening	Flashing		
Door obstructed when closing		Flashing	Beeps as door moves
Opener overloaded	Alternating flashes	Alternating flashes	
Pet Mode Engaged	On	On	
Mains power interrupted	Rapid flashes		

## Button Functions

Buttons	Function
OPERATE	Opens/Stops/Closes the door
DOOR CODE	Codes a transmitter button for operate function, Vacation function, Auxiliary function, Pet mode and Light function
FORCE MARGIN SET & OPEN	Increases the obstruction force margin setting
FORCE MARGIN SET & CLOSE	Decreases the obstruction force margin setting
FORCE MARGIN SET (then) SET	Resets the factory default force margin settings
CLOSE (for 6 secs.)	Clears the door limits set positions. Limits then need to be reset
PLUS(+) (for 6 secs.)	Enters pet (pedestrian) position mode
SET (then power on) & hold until all LEDs are off	Deletes control parameters excluding transmitter storage memory
DOOR CODE (then power on) & hold until all LEDs are off	Deletes all transmitter storage memory
SET & DOOR CODE (the power on) and hold until all LEDs are off	Deletes all control parameters and transmitter storage memory.
SET	Re-initialises the Opener to re-calculate force margin



# Troubleshooting guide

Symptom	Possible cause	Remedy
Door will not operate	Mains power not switched on Door is obstructed Door is locked or motor jammed Door tracks/hardware damaged	Switch on mains power Remove obstruction Unlock door or remove jam Door requires service/repair by qualified technician
Door starts to close but automatically reverses to open position	Adverse weather conditions (wind or cold) causing door to stiffen and become tight in the tracks Possible obstruction in the doorway	Increase force margin setting. See Step 17 on page 21 Remove obstruction
Door operates from drive unit (operate) button but not from transmitter.* *See note	Transmitter code not stored in memory Flat battery	Code transmitter into opener's memory. Refer Step 18.1 on page 22 Replace battery
Door will not close fully	Door limits position need to be reset	Reset limits positions. Refer Step 15.4 on page 19
Door will not open fully	Door limits position need to be reset	Reset limits positions. Refer Step 15.4 on page 19
Courtesy light not working	Faulty light	Replace lamp
PE Beam click but door does not reverse open when PE Beam is obstructed during close cycle	Wrong value of resistor is used PE Beam or wiring faulty PE Beam not aligned correctly PE Beam is obstructed	2k2 ohms resistor must be used on the receiver of PE Beam Remove obstruction See Step 20 on page 25

## PLEASE NOTE:

Some areas may be prone to excessive radio interference brought on by devices such as cordless telephones, wireless stereo headphones and baby monitors. It is possible that these devices could cause a degree of interference such as to greatly reduce the range of the transmitter. In such an instance please contact your ATA dealer for an alternative frequency replacement kit. As this is not a warrantable situation but an environmental issue charges may apply for the changeover.





# Maintenance

## Maintenance

Whilst your opener does not require any periodic maintenance, the door that it is fitted to does. Your garage door is a large, heavy, moving object and should be tested regularly to ensure it is in good condition. A poorly maintained door could cause fatal or serious injuries or serious damage to property.

To ensure a long and trouble free life for your opener the following is recommended:

### Monthly

- Disengage the opener and manually operate the door: The door must be smooth to operate by hand. An operating force on the bottom rail should not exceed 150N (15kg) force.
- Each month check that the opener reverses when the door contacts a 40mm high object placed on the floor (AS3350).
- 

**NOTE:** If the door does not operate smoothly, call your installer.

### Yearly

Automatic Technology suggests you contact your installer to perform an annual door service.



**CAUTION:** Frequently examine door, particularly cables, springs and mountings for signs of wear, damage or imbalance. Do not use if repair or adjustment is needed since a fault in the installation or an incorrectly balanced door may cause injury. (AS3350)



Adjustments should only be carried out by experienced persons, as this function can be dangerous if not performed under strict safety procedures.



**WARNING!** Failure to maintain your garage door may void the warranty on your garage door opener.

## Service Record

Record any maintenance in the following table to assist in any warranty service.

Date	Service by	Signature	Invoice No.	Amount





# Parts Listing

**Parts Listing**

ITEM NO.	DESCRIPTION	ITEM NO.	DESCRIPTION
26	PIN SNAP SSP 8 ZNU 31080	42	TAPTITE SCREW "S" R0HS PF THD M4 X 8
25	HEX SERRATION FLANGE NUT M8	41	C RAIL SLEEVE 400 TS01
24	HEX HEAD SCREW M8 X 25	40	C RAIL TRACK 790 TS01
23	CLEVIS PIN 0828	39	BENT ARM
22	PIN 0890	38	STRAIGHT ARM
21	GLOBE 24V / 15 W	37	CHAIN 1/2" x 1/8" (487 LINKS) W/2L
20	CONTROLS COVER VP3 SP	36	SPROCKET 12T-12.7 TS01
19	LIGHT DIFFUSER VP3	35	SPROCKET SUPPORT TS01
18	MAIN COVER VP3 GR SP AY	34	TENSION CHAIN ASSY TS01
17	TERMINAL BLOCK 500/02DS	33	STRING HANDLE ASSY VP2
16	TAPTITE SCREW "S" M3 X 14	32	SHUTTLE ASSY TS01
15	TRANSFORMER TDB-72-01 KIT (72V/A)	31	CHAIN INDEX V3
14	TERMINAL BLOCK SHIELD	30	TRACK BRACKET 78x20x32
13	CONTROL BOARD DCB07	29	WALL BRACKET TS01
12	WIRE GUIDE VP3	28	DOOR BRACKET LOCATOR
11	TAPTITE SCREW "S" R0HS PF THD M4 X 10	27	DOOR BRACKET
10	PAN SERRATION HEAD SCREW M4 X 12		
9	TAPTITE SCREW "P" M4 X 10		
8	RATCHET TIMING ASSY		
7	TIMING SUPPORT VP3		
6	HELICAL GEAR 58-1M CP		
5	GEARED MOTOR ASSY 15V1		
4	POWER CORD 1.5M W2P+1R		
3	CORD GRIP GROMMET SBSP-2		
2	GROMMET 101422		
1	METAL CHASSIS VP3 ASSY		
		10503	C RAIL TRACK 790 TS01
		04858	SPROCKET 12T-12.7 TS01
		04855	SPROCKET SUPPORT TS01
		02800	TENSION CHAIN ASSY TS01
		02790	STRING HANDLE ASSY VP2
		03005	SHUTTLE ASSY TS01
		04698	CHAIN INDEX V3
		04921	TRACK BRACKET 78x20x32
		01453	WALL BRACKET TS01
		71421	DOOR BRACKET LOCATOR
		00276	DOOR BRACKET
		02941	
		04585	
		02522	
		02515	
		02511	





# Warranty and Exclusion of Liability

1. This warranty is an addition to any non-excludable conditions or warranties that are implied into this contract by relevant statute, including the Trade Practices Act 1974 (Cwth).
2. Subject to all of the matters set out below, Automatic Technology Australia Pty Ltd ("ATA") warrants:
  - (a) overhead door opener drive units for twelve (12) months or 2500 cycles, whichever occurs first; and
  - (b) all components and accessories for twelve (12) months, from the date of purchase (specified in the sales docket receipt) as free of any defects in material and workmanship.
3. This warranty applies only where the purchaser:
  - (a) immediately notifies ATA or the retailer of the alleged defect;
  - (b) returns the product to the retailer; and
  - (c) presents the relevant sales docket and this warranty document to the retailer to confirm the date of purchase.
4. Except for this warranty, ATA gives no warranties of any kind whatsoever (whether express or implied), in relation to the product, and all warranties of whatsoever kind relating to the product are, to the extent permissible by statute, hereby excluded.
5. To the extent permissible by statute, ATA disclaims any liability of whatsoever nature in respect of any claim or demand for loss or damage which arises out of:
  - (a) accidental damage to or normal wear and tear to the product or to the product's components;
  - (b) any cost relating to damage resulting from wear and tear;
  - (c) blown fuses, loss or damage caused by electrical surges, power surges or power spikes;
  - (d) loss or damage due to theft, fire, flood, rain, water, lightning, storms or any other acts of God;
  - (e) maximum continuous operating time exceeding one (1) minute in ten (10);
  - (f) maximum operating force exceeding \*15kg (150N) when moving the door manually to the open or closed position;
  - (g) door surface area and/or weight exceeding 12m<sup>2</sup> and 80kg respectively;
  - (h) door not in safe and correct working order and condition;
  - (i) evidence of unauthorised repairs;
  - (j) any cost relating to damage caused by misuse, negligence or failure to maintain the equipment in a proper working order as per clauses (d) through (h);
  - (k) installation, adjustment or use which is not in accordance with the instructions set out in installation instruction manual
  - (l) attempted or complete modification or repairs to the product carried out by a person who is not authorised or has not been trained by ATA to carry out such modification or repairs;
  - (m) faulty or unsuitable wiring of structure to which the product is fixed or connected;
  - (n) radio (including citizen band transmission) or any electrical interference;
  - (o) damage caused by insects;
  - (p) loss or damage to any property whatsoever or any loss or expense whatsoever resulting or arising there from or any consequential loss;
  - (q) any cost or expense arising due to manufacturer recall of any product;
  - (r) any cost or expense due to negligence of the approved service provider;
  - (s) installation of a residential garage door opener in a commercial or industrial situation or a non-single residential dwelling.
6. ATA's liability under this warranty is limited, at ATA's absolute option, to replacing or repairing the product which ATA, in its unfettered opinion, considers to be defective either in material and/or workmanship or to credit the dealer with the price at which the product was purchased by the dealer.
7. This warranty does not extend to cover labour for installation.
8. This warranty is limited to Return-to-Base (RTB) repair and does not cover labour for on-site attendance.
9. This warranty is void if the Product is not returned to the manufacturer in original or suitably secure packaging.
10. This warranty is only applicable for repairs to the product carried out within Australia.
11. This warranty does not cover consumable items including globes, batteries and fuses.
12. This warranty is not transferable.
13. Where the Product is retailed by any person other than ATA, except for the warranty set out above, such person has no authority from ATA to give any warranty or guarantee on ATA's behalf in addition to the warranty set out above.

## NOTES:

1. One (1) cycle = one (1) open and one (1) close action of the door or gate.
2. This warranty is to be read in conjunction with the owner's copy of the installation instruction manual.
- 3 \*The door should be balanced in such a way that the user manually is able to open or close the door without using force not greater than 150N (15kg) although a greater force may be required for the start of the movement.







© August 2008 Automatic Technology (Australia) Pty Ltd. All rights reserved. TrioCode™ and SecuraLift® are trademarks of Automatic Technology (Australia) Pty Ltd. No part of this document may be reproduced without prior permission. In an ongoing commitment to product quality we reserve the right to change specification without notice. E&OE.

automatic  
TECHNOLOGY

smart | simple | secure

an alesco company

**Automatic Technology (Australia) Pty Ltd**

ABN 11 007 125 368

6-8 Fiveways Boulevard  
Keysborough, Victoria, 3173, Australia

P 1300 133 944

+61 2 9722 5666 (International Enquiries Only)

E [sales@ata-aust.com.au](mailto:sales@ata-aust.com.au)

[www.ata-aust.com.au](http://www.ata-aust.com.au)