 
 


Adjustment/Setting Quick Reference



STEP 1


Door should be in closed position. On first startup memory is blank (No preset limits).



STEP 2

Connect power cord, light is on and flashes 5 times.


If limits are in memory, light flashes 3 times.

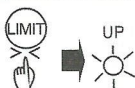

STEP 3

Press "LIMIT" button to enter limit-setting mode. UP LED is on.

To quit, press & hold "LIMIT" button till LED off.

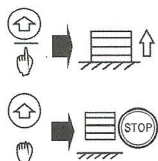

STEP 4 — Setting UP limit


Press & hold the "UP" button. Door travels up. When the door reaches the desired up limit position, release the "UP" button.

Door stops.

Attention for STEP 4 !

Over-load

During setting UP limit, if the opener detects extra loading caused by door binds, sticks or is out of balance, a beep is heard with all LEDs are off and the door stops.

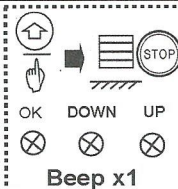

Beep x1



Caution

This is a warning sign that door-check or repair is needed. You may still continue setting the Up limit by repeating STEP3. After setting is done, the opener then operates in **Over-Drive Mode**, which Soft Open/Close feature is disabled.


Dead-load

If extra-loading is detected to be hazardous, both UP/DOWN LEDs lit and door stops during setting UP limit. For your safety and prevent damage to opener, follow steps below :

1. Follow Step 8 to set Down limit until the door in close position.
2. Disconnect door from opener by using Emergency knob.
3. Call a qualified service person.




Warning

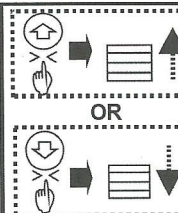

STEP 5 UP Limit Fine-Tuning


During limit-setting mode, press "UP" or "DOWN" to fine-tune to desired UP limit position.

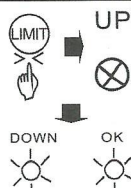

STEP 6


When the door is at desired UP limit position, press "LIMIT" button. "OK" LED flashes & LED goes out. "UP" LIMIT setting complete.

FLASH x2

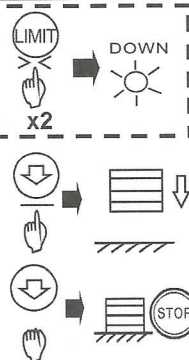


STEP 8 — Setting DOWN limit

Press LIMIT button twice. "DOWN" LED is on. Press & hold "DOWN" button. Door is traveling down at half speed. When door is approaching down limit position, release "DOWN" button, door stops.

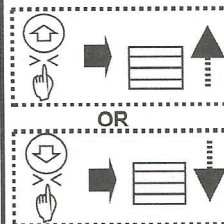

STEP 9 DOWN Limit Fine-Tuning


Press "DOWN" or "UP" to fine-tune to desired DOWN LIMIT position.

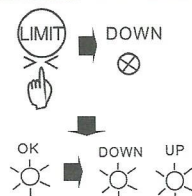

STEP 10

When the door is at desired DOWN limit position, press "LIMIT" button. "OK" LED flashes twice. "UP" & "DOWN" LEDs are on. UP & DOWN limits are now set.

FLASH x2

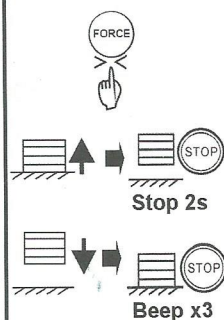

STEP 11— Force Auto-Learning


Press the "FORCE" button to enter force-learning mode.

The door will travel up at full speed and stop at up limit for 2 seconds.

Door will then travel down at full speed and stop at down limit. The Opener will beep 3 times, force is learnt automatically.

Stop 2s

Beep x3

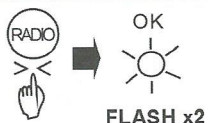


PROGRAMMING TRANSMITTER

STEP 1

To program transmitter press "RADIO" button. "OK" LED flashes twice. The unit is ready to accept a transmitter in coming 30s.

FLASH x2

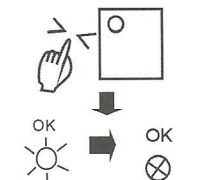

STEP 2

Press any button on the transmitter within 30s, "OK" LED flashes once and beeps twice.

Transmitter is now set.

BEEP x2



Warning! For your safety, Over-Drive Mode operation is NOT recommended. Please check your door immediately!

See Instruction Manual for Further Information.